

L2K1500 Lamp Replacement Instruction Sheet

INTRODUCTION

These instructions outline the details for Lamp replacement in the L2K1500 projector (Model No. 103-032106-XX). **NOTICE:** *Use only a Christie approved Lamp Kit for your specific projector model.*

KIT REQUIRED

003-120599-XX (Replacement Lamp)

INSTRUCTIONS

⚠ DANGER Allow the projector to cool for at least 45 minutes before the lamp cover is opened. The inside of the projector can become very hot and may cause injury.

NOTICES: **1)** *Switch the lamp OFF before opening the lamp cover.* **2)** *For continued safety, replace with a lamp assembly of the same type.* **3)** *Do not drop the lamp assembly or touch a glass bulb! The glass can shatter and may cause injury.*

NOTE: *The Lamp replacement icon will not appear when the Display function is set to “Off”, or during “Freeze”.*

LAMP REPLACEMENT

When the projection lamp reaches its end of life, the lamp replacement icon  appears flashing orange on the screen, and/or the LAMP 1/2/3/4 REPLACE indicators ([Figure 1](#)) which is located on top of the projector flashes orange. Replace the lamp with a new one promptly, refer to Steps below. The timing for illumination of the lamp replacement indicator depends on the lamp mode. See [Figure 2](#).

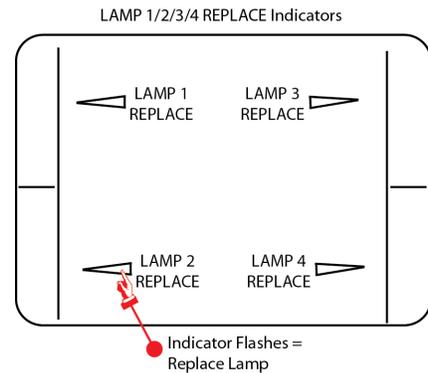


Figure 1

-  **Yellow Lamp**
Projection Lamp lights normally.
-  **Dim Lamp**
Projection Lamp is turned off.
-  **Red Lamp**
Projection lamp is nearing its end. When the image becomes darker or the color becomes unnatural, replace lamp. (LAMP REPLACE indicator lights orange.)
-  **X Mark on Lamp**
(LAMP REPLACE indicator flashes orange.)
Projection lamp is defective or fails to be turned on. Restart the projector on, and make sure lamp is on. If this mark still appears, replace lamp corresponding with number marked X.

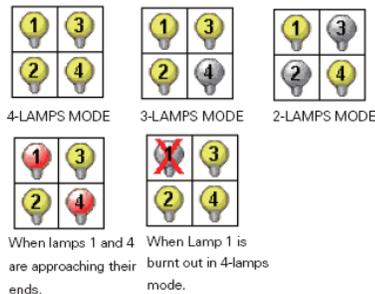


Figure 2

STEPS

1. Use the Lamp Mode ([Figure 2](#)) to verify which lamp (1,2,3,4) requires replacement. Refer to the User Manual, SETTING section for more details.
2. Switch the Main ON/OFF Switch to OFF and unplug the AC power cord from the AC outlet.
3. Loosen the lamp cover screw and slide the lamp cover away from the projector. See [Figure 3](#).

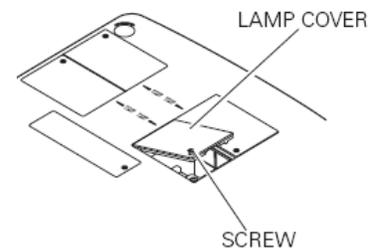


Figure 3

4. Loosen the lamp cover screw and slide the lamp cover away from the projector. Then lift the cover until it locks into place in the open position. See [Figure 4](#).
5. Loosen the 2 screws securing the lamp to be replaced and pull the lamp up by grasping the handle. See [Figure 4](#).
6. Install the new lamp and make sure the lamp is properly seated. Tighten the 2 screws.
7. Close the lamp cover and tighten the screw.
8. Connect the AC power cord to the projector and switch the Main ON/OFF Switch to ON.
9. Press the ON-STANDBY button to switch the projector ON.

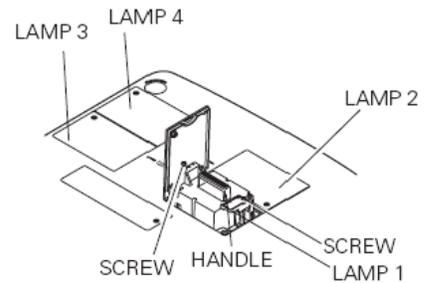


Figure 4

⚠ WARNING Do not operate the projector while any of the lamps are removed. This may result in malfunctions, fire hazard, or other possible accidents.

